

Genuine Accessories

Kampa[®]

Easy Awning Pulley

User Guide / Instructions



Product Code: **AC0306**

www.kampa.co.uk

AC0306/UM-06-18 Rev.A

Thank you for purchasing the Kampa Easy Awning Pulley. Ensure you read these instructions before use to avoid the possibility of damaging your caravan. Please retain these instructions for future use. Kampa and its distributors cannot be held responsible for any damage or loss resulting from incorrect installation or improper use.

Easy Awning Pulley

Step 1

Remove the awning stopper from the velcro attachment on the side of the cushioned body.



Step 2

Place the awning stopper into caravan rail channel opening (A) and slide around to the top of the caravan rail (B) where you would like to position your awning. This can be adjusted at any time.



Step 3

Insert the pulley body into the same rail opening as the stopper you previously placed.

IMPORTANT!

Ensure the pulley is NOT against the caravan and the cushioned pillow is flat against the caravan to avoid scratching the surface.



Step 4

Unwind enough rope to allow easy attachment to the awning eyelet.

Step 5

Attach the carabiner to the awning eyelet, located on the keder strip of the awning. Ensure you attach the carabiner to the eyelet located on the side of the awning which you will insert first.



Step 6

With the awning in one hand and the spool in the other, slide the awning into the opening of the rail channel.

Step 7

Holding the spool, slowly walk backwards until the awning is in a suitable position.


IMPORTANT!

If you feel the awning snag or catch, stop and readjust the awning.



Step 8

Unhook the carabiner from the awning eyelet (A) and remove the pulley from the awning rail (B). It is up to you if you want to leave the awning stopper in the rail or not.

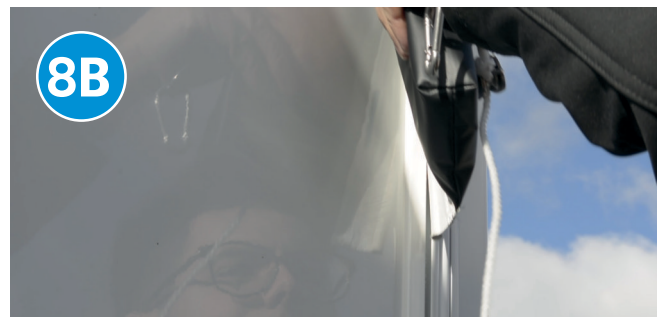

The sizes and specifications quoted are approximate and are given as an indication only.
Kampa UK Limited reserves the right to alter specifications as considered necessary and without notice.



www.kampa.co.uk

© 2018 Kampa UK Limited, Witham, CM8 3EU

Originalt ekstraudstyr

Kampa[®]

Easy Awning Pulley

Brugervejledning

DK



Varenummer: **AC0306**

www.kampa.co.uk

AC0306/UM-06-18 Rev.A

Tak fordi du købte Kampa Easy Awning Pulley. Sørg for at læse disse instruktioner før brug for at undgå risikoen for, at du skader din campingvogn. Behold disse informationer til fremtidigt brug. Kampa og distributører for Kampa kan ikke stilles til ansvar for nogen skade eller tab, forårsaget af ukorrekt installation eller brug.

Easy Awning Pulley


Trin 1

Fjern markisestopperen fra velcrostroppen på beskyttelsespudden.



Trin 2

Anbring markisestopperen i forteltskinnen ved åbningen af skinnen (A) og kør den op i toppen af forteltskinnen (B), til forteltets ønskede position. Placeringen af markisestopperen kan ændres når som helst.

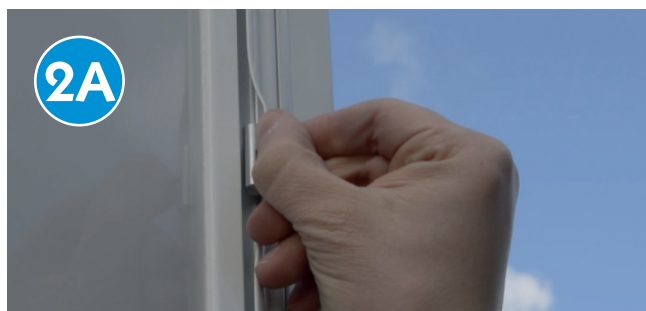

Trin 3

Kør beskyttelsespudden, med trissen på, ind i teltskinnen, og placer den op mod markisestopperen.

VIGTIG!

Sørg for at trissen hviler mod beskyttelsespudden og aldrig direkte mod campingvognen.



Trin 4

Frigør snor fra trissen mod den modsatte ende af campingvognen.

Trin 5

Fastgør karabinhagen til øjet i vulstbåndet. Vær sikker på, at du har fastgjort karabinhagen til den ende af forteltet, der køres først ind i skinnen.



Trin 6

Med forteltet i den ene hånd og spolen i den anden, køres forteltet ind i åbningen af teltskinnen.

Trin 7

Hold spolen i hånden, og gå langsomt baglæns indtil forteltet har den ønskede position


VIGTIG!

Hvis du føler, at forteltet eller snoren sidder fast, skal du straks stoppe og korrigere forteltet eller snoren med hænderne.



Trin 8

Frigør karabinhagen fra øjet (A) og fjern beskyttelsespudden og markisestopperen fra teltskinnen (B). Det er op til dig, om du vil fjerne eller lade markisestopperen sidde i forteltskinnen.

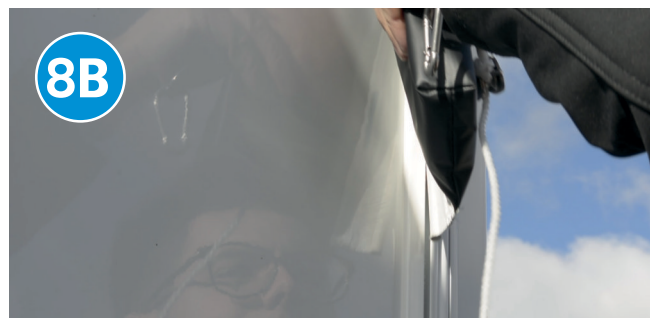

Kampa UK Limited accepterer ikke ansvaret for enhver form for betydningsfuldt tab. Størrelserne og specifikationerne opgivet er omtrentlig og er kun givet som en indikation. Kampa UK limited forbeholder retten til at ændre specifikationer, som er betragtet som nødvendige og uden underretning.



www.kampa.co.uk

© 2018 Kampa UK Limited, Witham, CM8 3EU